

Tots in Mind


Assembly Instructions for Original Cozy Crib Tent

Ages 0-36 Months

Pat. #4,945,584

WARNING:
**KEEP COZY CRIB TENT AWAY FROM FLAMES,
 CIGARETTES AND ALL HEAT SOURCES.**

FRONT VIEW (ZIPPER SIDE)

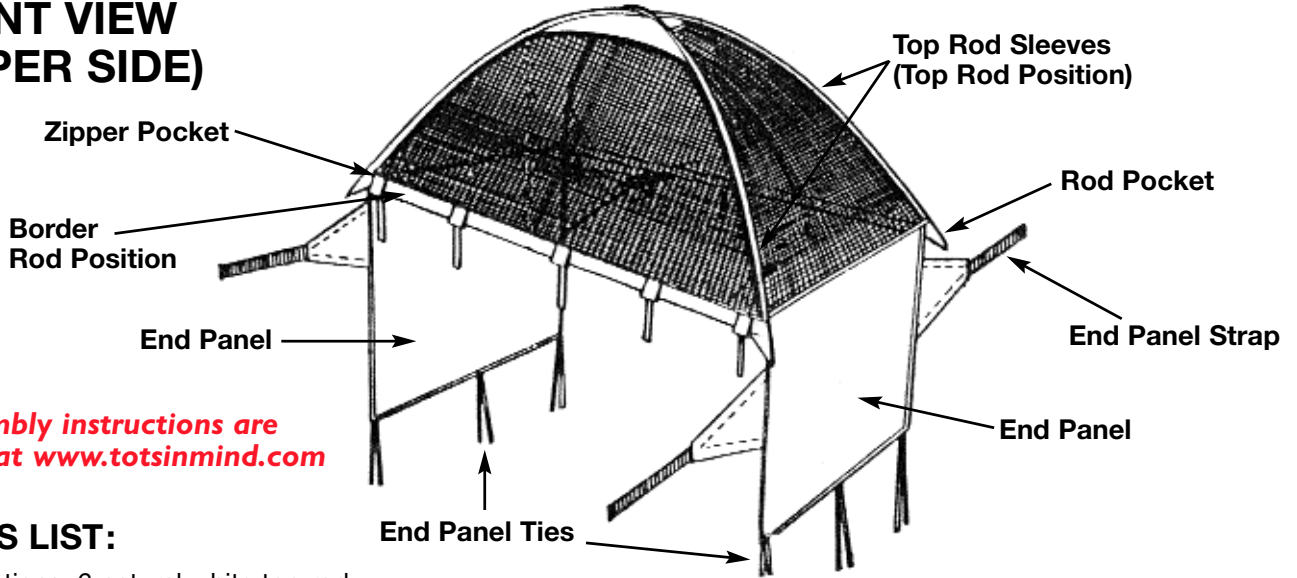


VIDEO assembly instructions are now on line at www.totsinmind.com

MATERIALS LIST:

- 10 Rod Sections: 6 natural white top rod sections and 4 beige border rod sections
DO NOT put 2 different colored sections together
- 1 Poly Bagged Cozy Crib Tent
- 1 5 inch Shoe Lace Tie

To be assembled by an adult


WARNING:
 Keep rods pointed away from face and pointed in safe direction. Top rod tension could cause a spring-back action during assembly!

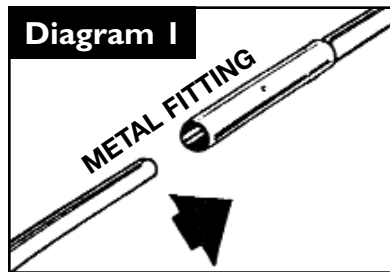

STEP 1:

Assemble the two top rods, each made up of 3 natural white sections (2 with metal fittings, 1 without) creating two completed top rod assemblies (see diagram 1). Then assemble the two border rods made up of 2 beige sections each (1 with metal fitting, 1 without) creating two completed rod assemblies (set aside for step 4).


NOTE: Do not commingle white top rods with beige border rods. This will breach structural strength.

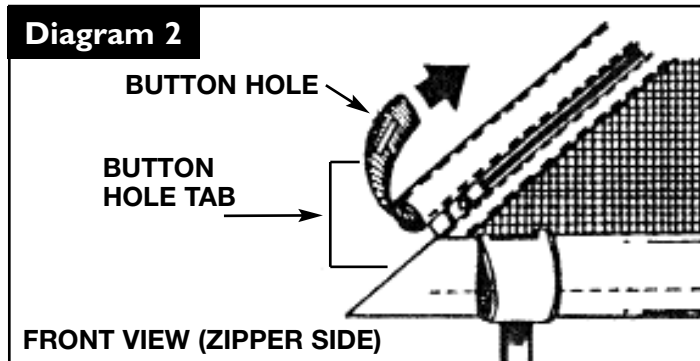

STEP 2:


INSERTING THE 2 COMPLETED TOP ROD ASSEMBLIES

*(made up of three natural white sections each)
 Locate the 2 button holes at front (zipper side) end of each top rod sleeve. Insert one completed rod assembly into each of the 2 button holes (see diagram 2) making sure each rod assembly is all the way into its reinforced rod sleeve at back end of unit, leaving both rod assemblies slightly sticking out of button hole until Step 3.

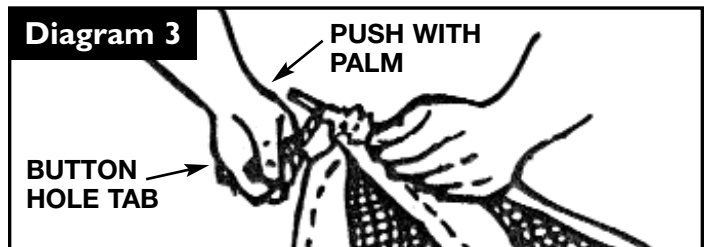

STEP 3:

Once both completed top rod assemblies are in their respective sleeves (making sure each rod assembly is all the way into its reinforced rod sleeve at back end), use a push-pull method to completely cover both top rod assemblies. Cover exposed end of rod assemblies by grasping material in one hand and pushing rod assembly in with palm of other hand until rod is completely covered and tucks back into its reinforced button hole tab forming dome of tent.

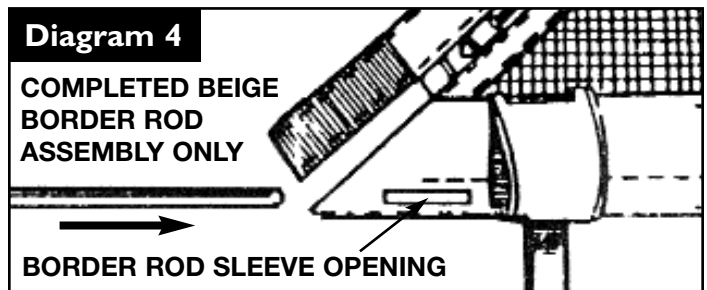


STEP 4:

INSERTING THE 2 COMPLETED BEIGE BORDER RODS


Locate the 2 completed beige border rod assemblies you made in Step 1 (made up of 2 beige rods each.) Locate the 2 buttonhole slits at one end of each border sleeve (front & back of tent - see diagram 4) and insert a completed beige border rod assembly into the bottom edge of each border and cover completely.

Please see reverse side for further directions!

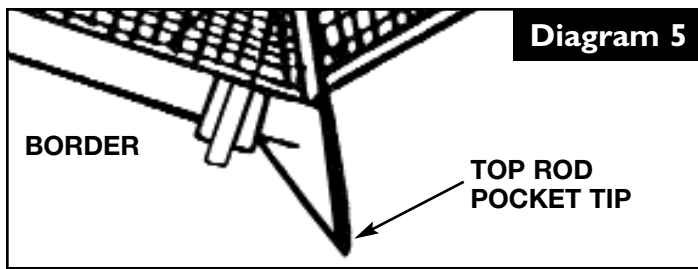

STEP 5:

Place the four **TOP** rod assembly ends into their respective pockets located on the end of each border by slightly bowing the end of each rod with one hand and grasping pointed tip end of border with other hand, so it will gently slip into pocket. See diagram 5. **(DO NOT attempt to stretch material over rod ends. gently pull rod pocket TIP and bow rod into pocket.)**

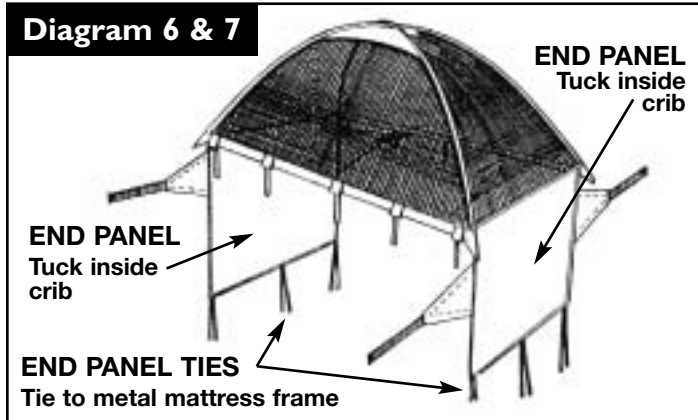

STEP 6:

Set assembled Cozy Crib Tent on top of crib rails (zipper side facing front), making sure both end panels hang **INSIDE** crib.

STEP 7:

Tuck end panels under crib mattress (pulling material taut) and tie end panel ties (3 on each panel) **SECURELY** to the metal mattress frame.

WARNING:
DO NOT add additional strings, straps, hook & loop, etc. to attach tent to crib!




STEP 8:

Secure end panel straps around the outside of each end of crib, sticking hook and loop straps together pulling taut.

IMPORTANT!
PLEASE NOTE THE FOLLOWING:

- When zipping the zipper, always make sure the zipper pull is inserted into its safety pocket.
- When washing or being stored, make sure all hook and loops are properly closed so lint or dirt will not hinder bonding.
- Check all hook and loop fasteners each and every time your Cozy Crib Tent is in use.
- If your Cozy Crib Tent does not fit the crib, DO NOT USE! Return to place of purchase.
- NOT to be used as punishment.
- Please save these instructions for future reference.
- If you feel your child is learning to open the zipper, as a safeguard, we have included a piece of shoelace tie that you should:
 1. Thread through the hole in the zipper pull.
 2. Knot, so that it forms a 2" - 3" loop.
 3. Place zipper pull in its pocket.
 4. Securely incorporate loop into the closest hook and loop lock by completely undoing hook and loop lock, then feed strap of lock through shoe string loop and begin to fasten lock securely as described in Step 9.

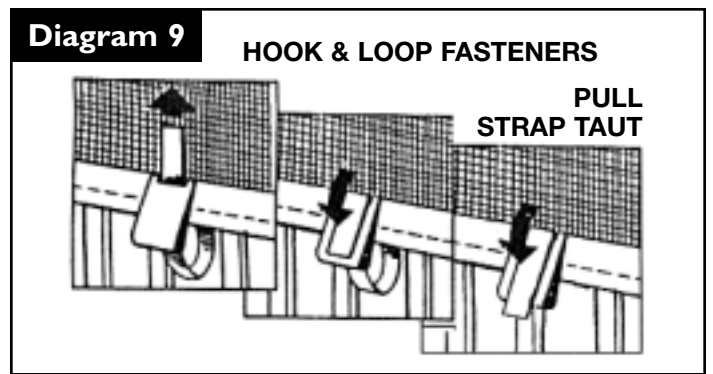

STEP 9:

Secure each hook and loop lock fastener around crib railing (five per side). Strap goes around railing, up on outside of border, lift hook and loop locking flap up and insert strap through hole pointing upward, then pull locking flap over. **MAKE SURE STRAP IS PULLED TIGHT AROUND THE RAILING.**

The strap then folds down over the flap. Press firmly to secure fasteners.

WARNING:
NEVER leave child unattended unless tent is securely attached to crib and completely zipped. Total structural integrity is only achieved when tent is secured properly and completely zipped.

Completely attached unit DOES allow crib rail to lower for easy access to child or bedding.

CAUTION:
ALWAYS MAKE SURE SIDE RAIL IS LOCKED IN ITS UP POSITION BEFORE LEAVING CHILD IN CRIB. NEVER LEAVE CHILD IN CRIB WITH SIDE RAIL DOWN!

Use according to instructions — to be used with (not in place of) parental supervision.

Collapses for easy storage or travel:

1. Detach unit from crib
2. Squeeze top rods together so unit flattens into a half circle
3. Tuck excess material into flattened dome
4. Keep unit closed by wrapping the closest end hook and loop strap around both rod ends then secure strap to lock. (Subject to change for product improvement without notice).

LIMITED WARRANTY

This warranty is extended only to the original purchaser. A purchase receipt or other proof of date of original purchase will be required before warranty performance is rendered.

This warranty only covers failures due to manufacturing defects which occur during normal use. It does not cover damage which results from misuse, abuse, mishandling, alteration, or improper assembly.

There are no other express oral or written warranties with respect to this product, and all warranties implied by law, including any warranties of merchantability or fitness for a particular purpose, are limited in their duration to the 60-day warranty period. (Some states do not allow limitation on how long an implied warranty lasts, so the above limitation may not apply to you.)

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Cozy Crib Tent is warranted against defects in materials and workmanship for a period of 60 days after the original date of consumer purchase. If the Cozy Crib Tent should become defective within the warranty period, we will replace it free of charge. Contact Tots in Mind at: info@totsinmind.com

For your convenience, please visit our website for additional products, additional information and the closest retail location near you.
www.totsinmind.com email: info@totsinmind.com